


# HOW TO USE YOUR WASHER/DRYER

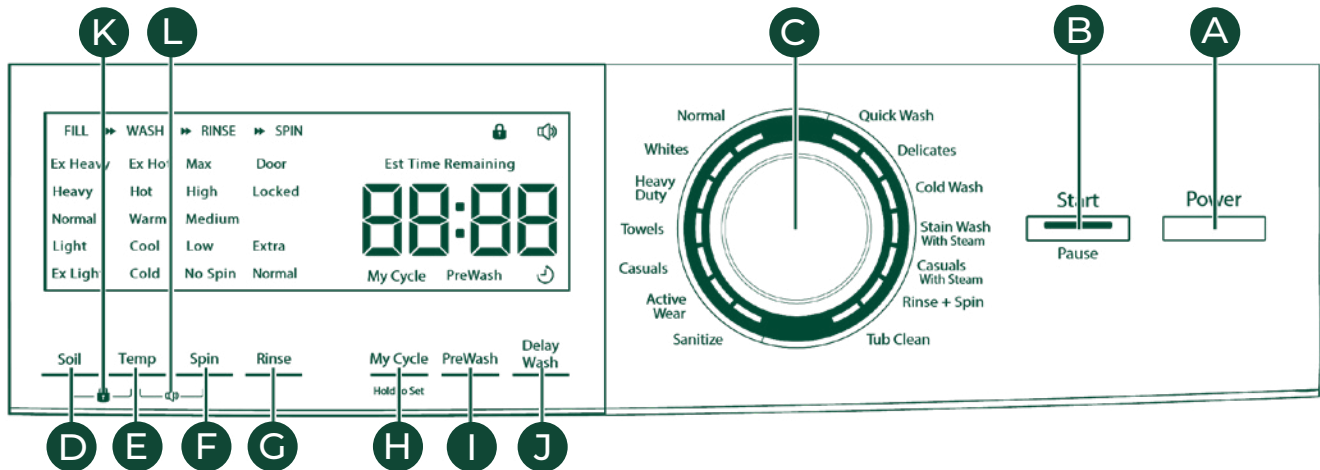

- A POWER**  
Press to “wake up” the display. If the display is active, press to put the washer into standby mode.
- B START/PAUSE**  
Press to start a wash cycle. If the washer is running, pressing it once will pause the washer and unlock the door.
- C WASH CYCLES**  
The wash cycles are optimized for specific types of wash loads.
- D SOIL**  
Changing the **Soil** level increases or decreases the wash time to remove different amounts of soil.
- E TEMP**  
Adjust to select the proper water temperature for the wash cycle. The rinse water is always cold to help reduce energy usage and reduce setting of stains and wrinkles.
- F SPIN**  
Changing the **Spin** setting changes the final spin speed of the cycles.
- G RINSE**  
Changing **Rinse** will change the number of rinses the cycle will use. On **Rinse+Spin** cycle, a drain and spin cycle can be achieved by selecting no rinse.
- H MY CYCLE**  
To save a favorite cycle, set the desired settings for wash cycle, soil level, spin speed and wash temp settings and hold down the **My Cycle** button for 3 seconds.
- I PREWASH**  
**Prewash** is an extra wash before the main wash. Use it for heavily soiled clothes or for clothes with a care label that recommends prewashing before washing.
- J DELAY WASH**  
Use to delay the start of your washer.  
1. Choose your wash cycle and any options.  
2. Press **Delay Wash** button. Stop pressing the button when your desired time is displayed.  
3. Press the **Start/Pause** button to start the countdown.
- K LOCK**  
You can lock the controls to prevent any selections from being made. To lock the washer, press and hold the **Soil** and **Temp** buttons together for 3 seconds.
- L SIGNAL**  
When the light is on, the washer will beep at the end of the cycle and every time you press a button on the control panel.

**Note: We recommend using HE (high efficiency) detergent with this washer.**

## WARNING:

Remove all items from your pockets before loading in the washer. Items such as bobby pins, paperclips, pens and pencils can cause damage to the washing machine. If maintenance or a third party discovers foreign materials in the washer or water pump, you will be charged for any damage. If the clothes are not drying properly, please call maintenance to clean out the lint trap.